



SK3000 SKI INSTRUCTIONS (for Shappell 3000 Shelter)

Tools Required: Electric Drill, 1/4" Drill Bit, 5/32" Drill Bit, #2 Philips Screwdriver, 5/16" Socket Wrench or Small Adjustable Pliers.


- 1) Locate Dimples on inside facing walls of both 2nd Ribs & outside facing walls of both 4th Ribs as shown in Fig. 1. Drill thru only one wall of the Ribs at the Dimples with a 1/4" drill bit. **DO NOT DRILL THROUGH BOTH WALLS OF RIB.**

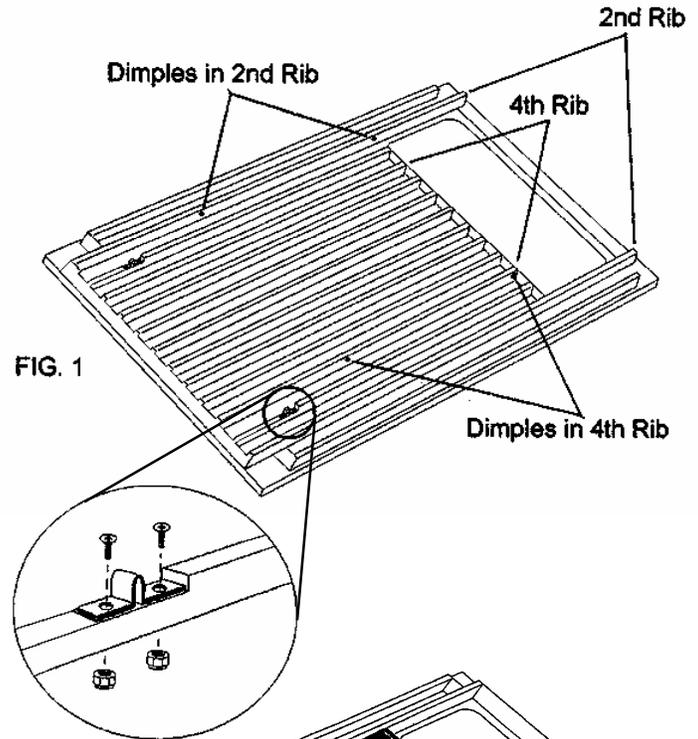

- 2) Place Ski Lock Bracket on Step of the 3rd Rib as shown in Fig. 1. If your floor has no step in 3rd rib go to Instructions on back. Hold Bracket so it is against the Step edge of 3rd rib and centered on rib. Fold ski down over bracket to make sure bracket goes into second oval hole from end of ski. Lift Ski and Drill (two) 5/32" holes thru holes in bracket into rib. **If your shelter has carpet, remove several of the carpet fasteners and fold carpet back.** Attach Ski Lock Brackets with 1/2" Flat head machine screws and lock nuts provided. Re-Install carpet fasteners to secure carpet.

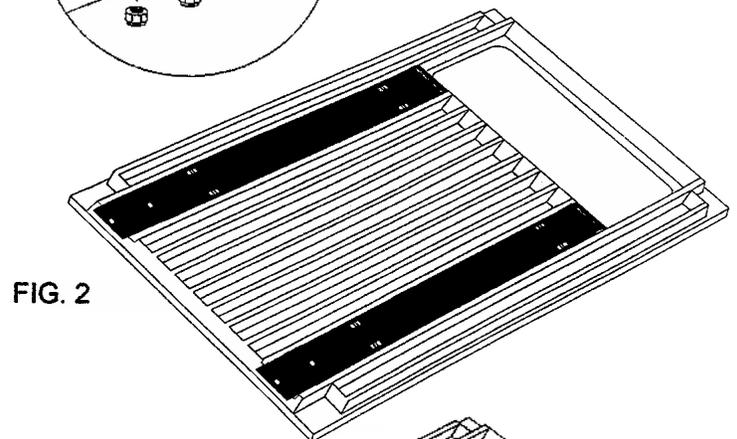


- 3) Position Skis as shown in Fig. 2. NOTE: Hole in end of ski should be at edge of shelter floor and angled end of ski is at edge of fishing hole. Insert ears of wire brackets into holes on one rib until the end of the ear hits the opposite wall of the rib. Then squeeze each wire bracket so you can insert other ear into hole in opposite rib.

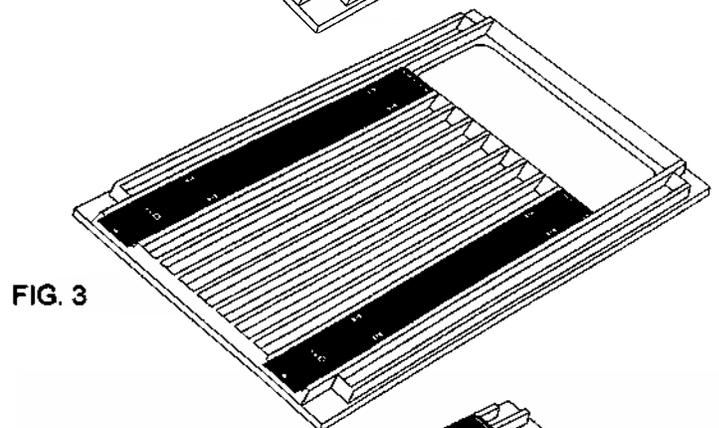


- 4) To Secure Ski in Folded Position: Fold Ski flat to floor so that second oval hole from end of ski is over Ski Lock Bracket and install clip pin thru bracket as shown in Fig. 3.

- 5) To Lock Ski in Towing Position. Lift Ski up and bend front edge of Ski down and place oval hole in end of Ski over Ski Lock Bracket, then slide clip pin thru Ski Lock Bracket to lock ski in upright position as shown in Fig. 4.

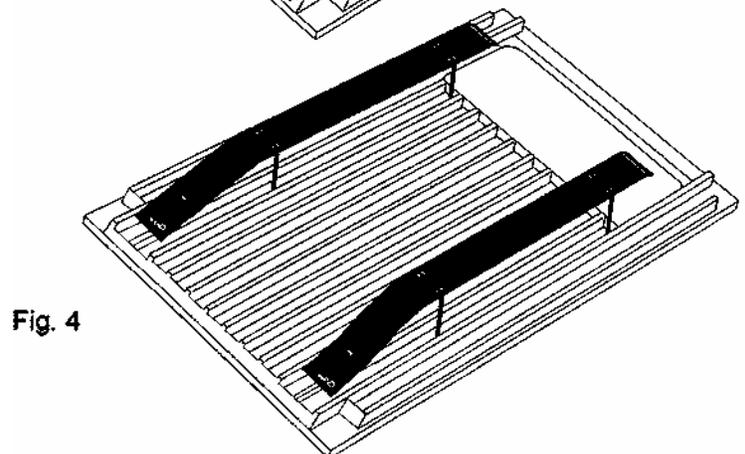


- 3) Position Skis as shown in Fig. 2. NOTE: Hole in end of ski should be at edge of shelter floor and angled end of ski is at edge of fishing hole. Insert ears of wire brackets into holes on one rib until the end of the ear hits the opposite wall of the rib. Then squeeze each wire bracket so you can insert other ear into hole in opposite rib.

FIG. 2

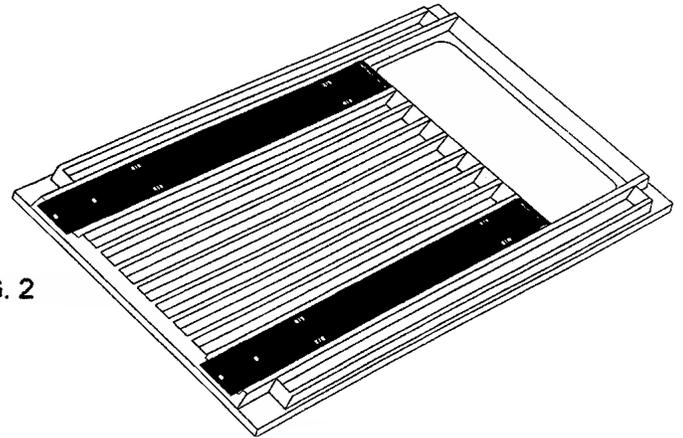


- 4) Fold skis back toward fishing hole. Place Ski Lock Bracket on top of 3rd rib Fig. 2A, (about 6" in from edge) and lower ski down so that bracket goes into second oval hole from end of ski. Carefully lift ski up and back. Hold Ski Lock Bracket in position and drill 5/32" holes through bracket holes into 3rd rib. **If your shelter has carpet, remove several of the carpet fasteners and fold carpet back.** Attach Ski Lock Brackets with 1/2" Flat head machine screws and lock nuts provided. Re-Install carpet fasteners to secure carpet.

Fig. 2A

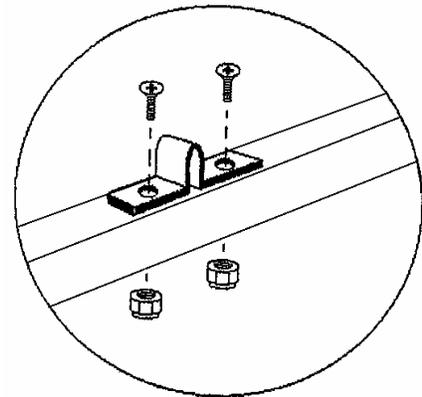

- 5) To Secure Ski in Folded Position: Fold Ski flat to floor so that second oval hole from end of ski is over Ski Lock Bracket and install clip pin thru bracket as shown in Fig. 3.

FIG. 3

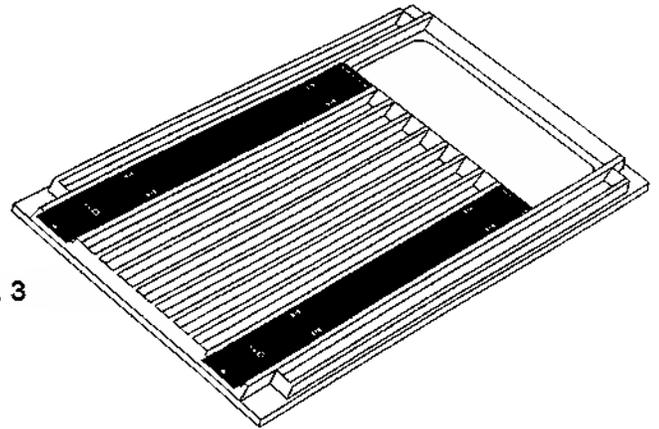

- 6) To Lock Ski in Towing Position. Lift Ski up and bend front edge of Ski down and place oval hole in end of Ski over Ski Lock Bracket, then slide clip pin thru Ski Lock Bracket to lock ski in upright position as shown in Fig. 4.

Fig. 4

